Amana
BUILT BETTER THAN IT HAS TO BE™

Owner's Manual

Top Loading Washer

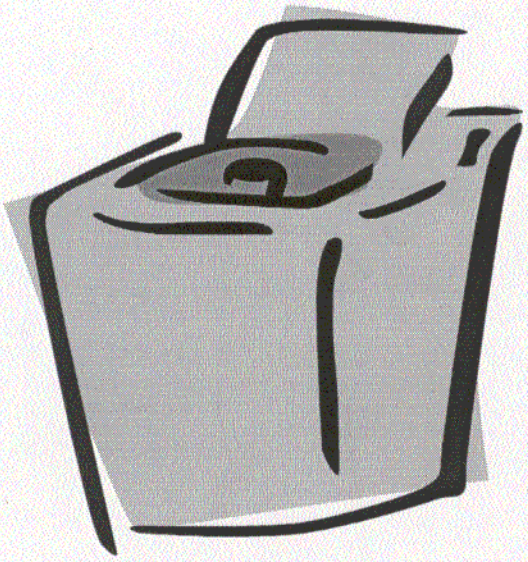

DLW330RA

Amana®
Distinctions™

Keep instructions for future reference. Be sure manual stays with washer.

Contents

Important Safety Information 3
Starting the Wash 4
Cycles 6
Dispensers 7
Features, Hints, and Care 8
Moving and Storage 9
Trouble Shooting 10
Warranty 12

Part No. 40118601
Printed in U.S.A. 12/00

© 2000 Amana Appliances
Amana, Iowa 52204

Starting the Wash

If These Controls are Different from Yours

These controls are intended to show the variety of features that are available in the product line. If your washer does not have all the options that are shown, it is not a mistake. The information provided applies to several of the models in the product line.

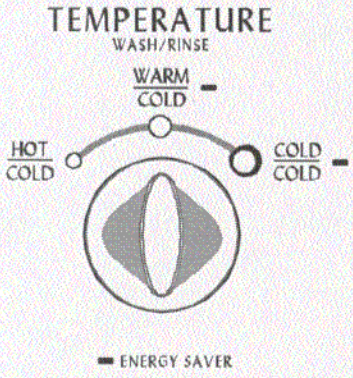

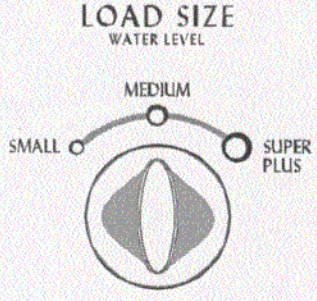

1. Prepare clothes for washing

For best wash results:

- Remove items from pockets and cuffs
- Close zippers and fasteners; mend rips and tears
- Sort items into separate loads
- Pre-treat stains and heavily soiled areas

2. Select WASH/RINSE temperature

Always follow garment manufacturer's care labels for each fabric. See chart below.

WASH / RINSE	TYPE OF CLOTHING
Hot/Cold	Sturdy whites and colorfast items; work clothes, soiled items, and cloth diapers
Warm/Cold –	Moderately soiled permanent press, silks, woolens, nylon, acrylic Rinsing of some items
Cold/Cold –	Non-colorfast items Extra-delicate clothing Rinsing of most items

NOTE: Energy Saver settings, marked with a dash (–), show temperature settings that use the least energy.

3. Select LOAD SIZE / WATER LEVEL

Variable control allows you to select the most appropriate setting for each wash load. Do not fill above top row of holes in tub with clothes. Use Water Level chart below to determine setting.

LOAD SIZE	WATER LEVEL
Super Plus	Max. Fill
Medium	3/4 Full
Small	1/2 Full

Starting the Wash (cont'd)

4. Select wash cycle and time
Push timer knob in and turn to desired cycle and wash time. Timer knob can be turned in either direction. Wash cycle and time selection depends upon type of fabric and amount of soil. For best results when cleaning heavily soiled items, use longer wash time, up to 15 minute maximum.
Lightly soiled items require less wash time. See "Cycles" section for more information.

5. Pull OUT timer knob to start
Water fill begins.

6. Measure and add detergent to wash tub
Use only detergent recommended for top-loading washers.

7. Add clothing to water in wash tub
DO NOT pack clothes into tub. Loosely fill tub with clothes no higher than top row of holes. Items must move freely through water.

8. Adjust water level, if necessary
Bulky fabrics need more water added after agitation begins.

9. Close lid of unit
Unit will not operate when lid is open.

Why does my agitation stop and start during the cycle?

Wash action consists of periods of agitation, with pauses or periods of soak. This is normal operation.

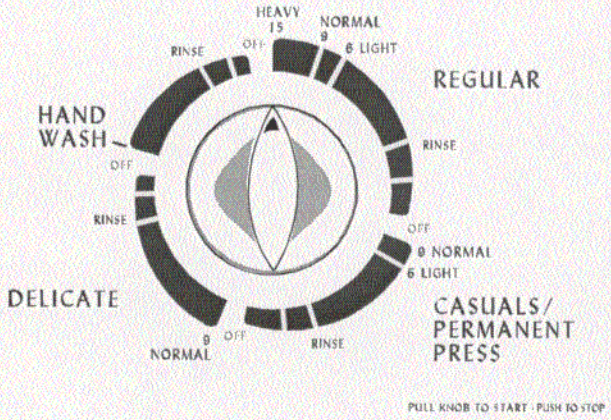

What if I want to use only the spin portion of my cycle?

This may be useful if you need to remove excessive moisture from hand-washed objects or just wanting to remove as much moisture as possible from your items. To find the spin setting, locate the notch in the colored controls between the rinse cycle and the end of the cycle.

Cycles

What do the little numbers mean?

There are three methods use to clean your clothes: agitation, soaking periods, and spin/spray periods.

These are referred to as the wash action of the cycle. The numbers next to the cycles refer to the *wash action* time, or the time that the clothes are actually being cleaned.

These numbers do not include the time of the final rinse and final spin portion of the cycle.

HAND WASH

Use for fine fabrics normally washed by hand. To protect fragile fabrics, washer speed automatically runs at Gentle/Slow, regardless of position of speed selector switch. This cycle features gentle wash action, including short periods of agitation and long periods of soaking.

REGULAR

Use for sturdy items, like play or work clothes, towels, T-shirts, etc.

CASUALS/ PERMANENT PRESS

Use for clothes that recommend a permanent press cycle and other synthetics.

DELICATE

Designed to care for items such as blouses, nylons, lingerie, and other hand washables, this cycle features gentle wash action, including short periods of agitation and long periods of soaking.